


REPLACEMENT PARTS OF SHOCK ABSORBERS FOR MOTOR CYCLES

SEE REMARKS
REFERENCE
TYPE-7610

INDEX	DESCRIPTION	SEE REMARKS	REFERENCE TYPE-7610
1	PROTECTIVE COVER		15.23.24.017.0
2	UPPER FIXING EYE		70.52.07.003.0
3	ADJUSTING DISC		70.40.02.072.1
4	SNAP SPRING		70.40.02.075.0
5	SEALING WASHER now 70-40-02-085-0		70.40.02.070.0
6	"O" RING		1601.70.00.05
7	LOCK WASHER now 70-40-02-086-0		70.40.02.069.0
8	MUT FOR EYE ATTACHMENT		70.52.16.003.0
9	UPPER SPRING RETAINER		70.29.01.203.0
10	BUMP RING <small>note of 70.34.73.000.0-H=24 or 70.34.74.000.0-H=15 or 70.34.87.000.0-H=8</small>	X	70.34....000..
11	BUMP STOP <small>(BLACK) 15.34.18.000.0 or (WHITE) 71.34.26.000.0</small>	X	...34....000..
12	PISTON ROD	X	76.61.12.000.1
13	ADJUSTING PIN	X	70.00.00.070.1
14	BUMP PLATE		15.34.60.000.1
15	RESERVOIR TUBE SEAL NUT FOR STEEL DAMPER FOR ALLOY DAMPER		70.25.00.128.0
16	ROD OIL SEAL		15.23.11.079.0
17	"O" RING		1601.72.02.14
18	GUIDE <small>FOR STEEL DAMPER FOR ALLOY DAMPER</small>		77.22.02.019.1
19	LOWER SPRING RETAINER <small>FOR STEEL DAMPER FOR ALLOY DAMPER</small>		76.29.11.028.0 70.29.11.128.0
20	RESERVOIR TUBE (COMPLETE)	X	
21	CYLINDER TUBE	X	76.17.14.000.0
22	REBOUND STOP		15.36.37.000.0
23	PISTON WASHER		76.05.04.003.0
24	SPACING WASHER		76.05.05.002.0
25	NON RETURN VALVE		76.05.01.006.0
26	PISTON		76.12.00.009.0
27			
28	SPACER		70.05.03.098.0
29	BYPASS VALVE		70.05.03.091.0
30	SPACER now 70-05-03-112-0		70.05.03.099.0
31			
32	SET SCREW (LEFT OR RIGHT THREAD)		70.07.02.033.1
33	FOOT VALVE		76.04.21.000.0
34	SPACING WASHER		82.05.04.002.0

+1,2

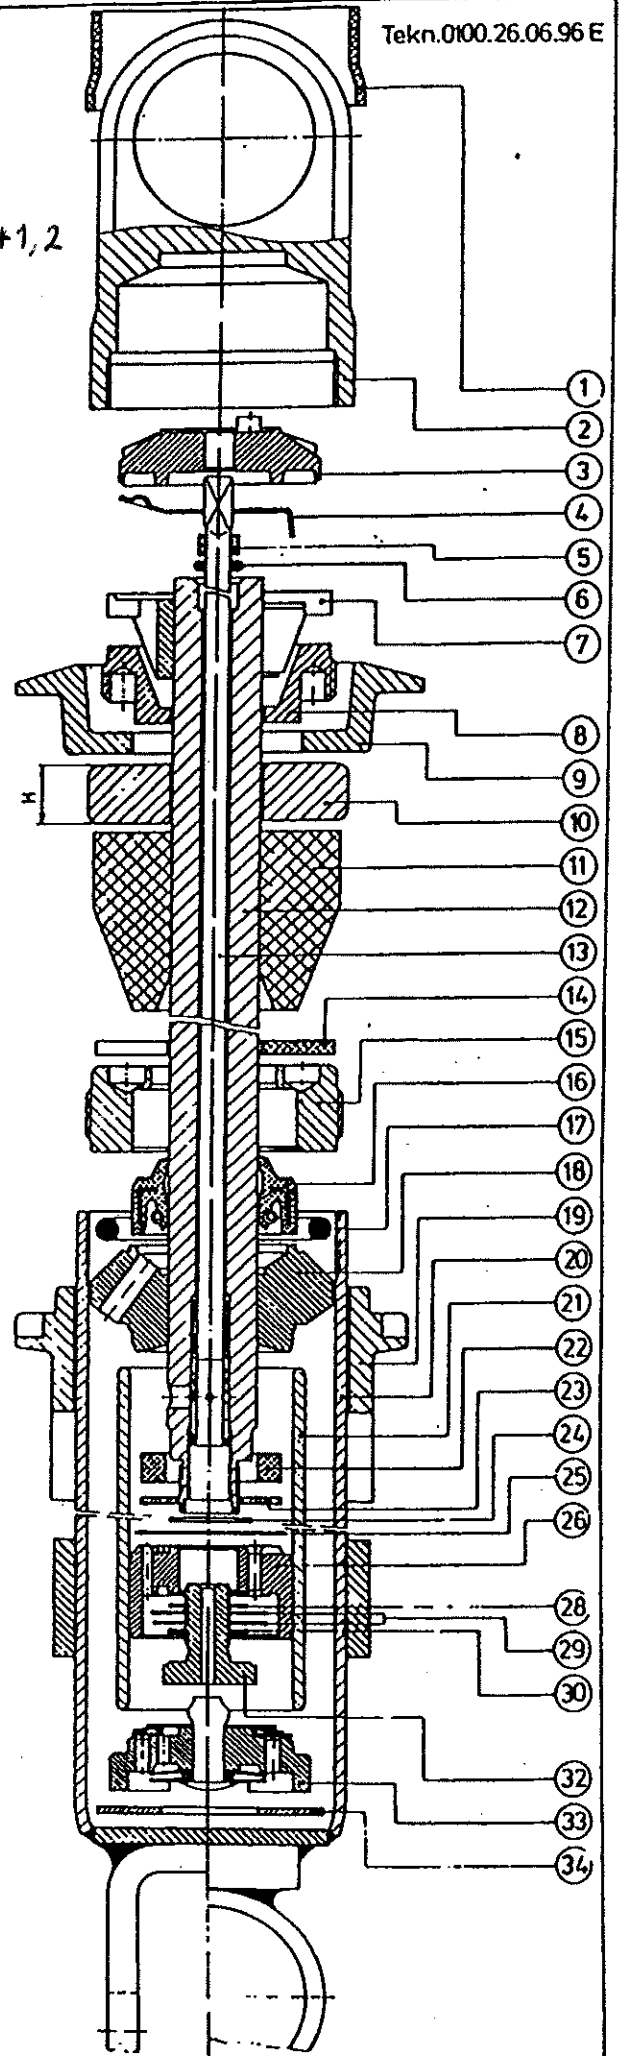

X: PLEASE INDICATE THE CORRESPONDING SHOCK ABSORBER TYPE NUMBER AND THE DATE OF MANUFACTURE FOR THE PARTS MARKED.
 TOOLS: TOOL FOR EYE ATTACHMENT (PART NO. 8) 1876.02.41.35.
 TOOL FOR RESERVOIR TUBE SEAL NUT (PART NO.15) 1876.02.42.15.
 PISTON ROD SEAL ASSY BULLET NO 1876.01.73.83.

Get.	Wiz.								
Gez.	Pac								